

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Introduction	1-2
Conventions Used	1-3
What's in the Box?	1-4
Getting Started	1-5
Before You Begin... ..	1-6
Step 1 - Install Configuration Software	1-7
Step 2 - Launch Configuration Software	1-8
Step 3 - Connect Power Wiring	1-9
Step 4 - Connect the ViewMarq Message Display to a PC	1-10
Step 5 - Apply Power to the Display	1-11
Step 6 - Create Link between the ViewMarq and your PC	1-12
Step 7 - Creating Messages	1-15
Step 8 - Simulating Messages	1-16
Step 9 - Sending Messages to the ViewMarq Message Display	1-17
Step 10 - Sending Messages from your PLC to the ViewMarq	1-18
Chapter 2: Specifications	2-1
Overview	2-2
Specifications	2-3
Environmental Specifications	2-6
Power Supply and Communication Specifications	2-7
Power Supply Removable Terminal Blocks	2-7
AC Power Supply Specifications	2-8
External DC Power Supply Requirements	2-8

Table of Contents

Communication and Discrete Input Connections	2-9
RS-232 Port 1 RJ12 Connector	2-10
Port 1 RS232 Terminal Block Connection	2-11
Port 2 RS-485 Terminal Block Connection	2-11
Port 3 Ethernet Connection	2-12
Discrete Input Specifications	2-13
Communication LEDs	2-14
Mechanical Features	2-15
Front View	2-15
Back View	2-15
Dimensional Drawings	2-16
MD4-0112T and MD4-0124T	2-16
MD4-0212T and MD4-0224T	2-17
MD4-0412T and MD4-0424T	2-18
Chapter 3: Hardware Installation	3-1
Safety Guidelines	3-2
Plan for Safety	3-2
Introduction to ViewMarq Mechanical Design	3-3
Power Connections and Specifications	3-4
Power Connections Cover	3-4
Power Installation	3-4
Power Supply Removable Terminal Blocks	3-5
Grounding	3-6
Ambient Temperature	3-6
Fuse Protection	3-6
Communications Connections	3-7
Communication Connections Cover	3-7
Communication and Discrete Input Connectors	3-7
RS-232 Port 1 RJ12 Connector	3-8
Port 1 RS-232 / Port 2 RS-485 Terminal Block Connection	3-8
Port 3 Ethernet Connection	3-9
Port 4 Discrete Inputs	3-9
ViewMarq Mounting	3-10



Mounting Position	3-10
Mounting Clearance	3-10
Viewing Angle and Distances	3-11
Mounting Brackets	3-12
Wall Mounting	3-13
Chain Mounting	3-15
Chapter 4: PC to ViewMarq Communication	4-1
Introduction	4-2
Links	4-2
Adding a New Link	4-5
Ethernet Link	4-6
Serial Link	4-9
Chapter 5: Creating and Previewing Messages	5-1
Creating and Previewing Messages	5-2
The Software Workspace	5-3
Select the ViewMarq Size	5-3
Saving the Message	5-4
Open a Saved Message	5-5
Text Editor Overview	5-6
Software Purpose	5-6
Supported Characters	5-6
Message Length	5-6
Message Formatting	5-7
Character Toolbar	5-7
Line Toolbar	5-8
Scrolling Multiple Lines Together	5-10
Other Tools	5-10
LED Display ID	5-11
Message Simulator	5-12
Command String Window	5-13

Chapter 6: Configuring the ViewMarq Panel	6-1
Introduction	6-2
Message Display Selection and Configure Message Display	6-2
Message Display Settings	6-5
Global Settings	6-5
Communication Setting	6-7
Export and Import Configuration	6-12
Export Configuration File	6-12
Import Configuration File	6-13
Chapter 7: Sending Messages from a PLC to ViewMarq	7-1
Introduction	7-4
ASCII	7-5
Modbus	7-5
Reading the ASCII Reply when using Modbus	7-6
String Length Limitations with PLC's	7-6
Sending Strings from multiple PLC's	7-11
Modbus with Multiple Displays or other Slave Devices.	7-12
CLICK PLC by AutomationDirect	7-13
RS-232	7-13
RS-485	7-13
ASCII	7-14
Modbus	7-17
Optional Error Checking	7-21
Productivity3000 PAC by AutomationDirect	7-25
Ethernet	7-25
RS-232	7-25
RS-485	7-26
Embedding the String into PAC memory	7-27
Sending Strings from Productivity3000 to the ViewMarq display by ASCII over Serial	7-28
Sending Strings from Productivity3000 to the ViewMarq display via Modbus	7-31
Modbus Serial	7-34
Optional Error Checking	7-38
Ethernet Modbus TCP	7-42
Optional Error Checking	7-44

Do-More PLC by AutomationDirect	7-47
RS-232	7-47
RS-485	7-47
Ethernet	7-48
ASCII	7-48
Modbus	7-53
Modbus TCP	7-63
DirectLogic PLC by AutomationDirect	7-66
Sending Strings from DirectLogic to the ViewMarq display by ASCII over Serial ..	7-66
Using the DirectLogic PRINT instruction	7-67
Using PRINTV instruction (D2-260 or D0-06 only)	7-68
Embedding the String into PLC memory	7-68
Sending Strings from DirectLogic to the ViewMarq display by Modbus over Serial ..	7-70
Optional Error Checking	7-73
Sending Strings from DirectLogic to the ViewMarq display by Modbus over Ethernet ..	7-76
PLC Cabling Chart	7-83
Allen Bradley MicroLogix and SLC PLCs	7-84
RS-232	7-84
ASCII	7-85
Modbus	7-91
Allen Bradley CompactLogix and ControlLogix PLCs	7-103
RS-232	7-103
ASCII	7-103
Chapter 8: Variables	8-1
Variables	8-2
Inserting a Variable	8-2
Editing a Variable	8-3
String Variables	8-4
String Variable Setup	8-4
Setting String Variable Value	8-6
Numeric Variables	8-9
Numeric Variable Setup	8-9
Setting Numeric Variable Value	8-11

Chapter 9: Maintenance and Troubleshooting	9-1
Introduction	9-2
Updating Firmware	9-2
Load Firmware Message	9-4
Reboot LED Display	9-4
Reset Factory Defaults	9-5
LED Test	9-6
Error Messages	9-7
ASCII Command String Syntax Error Messages	9-8
Diagnostic LED	9-9
 Chapter 10: Message List	
Introduction	10-2
Message List Features	10-2
Main Window Message List Toolbar	10-3
The Message List Management Window	10-5
Adding Messages to a Message List	10-6
Editing an existing Message List	10-7
Autoloading Message	10-7
Configuring the ViewMarq display for Message List	10-8
Downloading Messages to the ViewMarq Display	10-10
Triggering Messages in the Display	10-11
Using the <DO n> command	10-11
Using the Discrete Inputs	10-11
Testing a Message List	10-12
Compare Message Lists	10-13
Backup a Message List to a File	10-14
Restore a Message List File to a ViewMarq Display	10-15
Clear Message List in the LED Display	10-16
Format of Stored Messages	10-16

Appendix A: ViewMarq ASCII Command Specifications	A-1
ViewMarq Commands	A-2
ASCII String Commands	A-3
ASCII String format	A-3
Basic Commands	A-5
Embedded Variables	A-16
Advanced Commands	A-18
Display Commands	A-19
Non Display Commands	A-20
Appendix B: Modbus Registers	B-1
Modbus Registers	B-2
Option Flags	B-4
Supported Modbus Function Codes	B-4
Appendix C: ViewMarq Characters	C-1
ViewMarq Character List	C-2